

Servend® Parts & Service Communicator

Subject: Ice Flow Restrictor



Figure 1

SCOPE

For all Servend dispensers equipped with a Rocking Chute assembly (See Figure 1), an Ice flow restrictor (See Figure 2) is now available. This ice flow restrictor decreases the amount of ice allowed to enter the ice chute by blocking a small area at the entrance of the dispenser chute. This in turn restricts the flow of ice that is dispensed in to your cup.

Please refer to the instructions included with this bulletin for installing the ice flow restrictor. List prices may be subject to change without notification.

Please call your local parts distributor for current pricing before ordering.

Part #	Description
5013822	Kit Ice Flow Restrictor

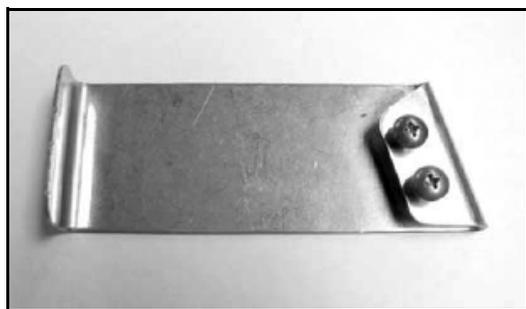
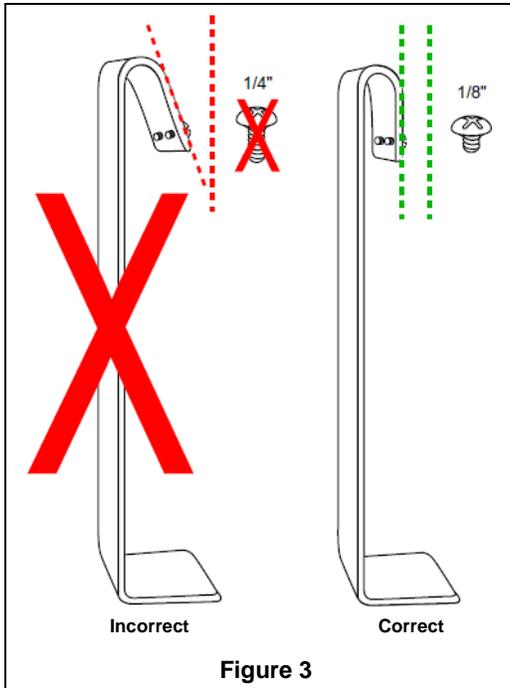


Figure 2

**ACTION****Proper Ice Flow Restrictor Installation**

In a continuous effort to improve our equipment Manitowoc Beverage Equipment has made a small change to the M/MD/S/SV/SVi Ice Flow Restrictor Kit. This kit is now supplied with two 1/8" screws rather than the two 1/4" screws previously used to secure the restrictor to the chute of the dispenser. This change was made to assure the screws would not interfere with the movement of the rocking chute assembly. This bulletin was also created to show technicians what a correctly bent ice flow restrictor will look like from the factory. If the restrictor is bent incorrect it can be corrected by simply pinching with a pair of pliers until the bent part is parallel with the main body of the restrictor. See example to the left.

Ice Flow Restrictor Installation Instructions (figure 4)

1. Unplug the dispenser.
2. Remove merchandiser, rocking chute, rocking chute door and door lock from the dispenser.
3. Remove the screws from the ice flow restrictor.
4. Slide the ice flow restrictor into the left side of the dispenser chute with the fold fitting over the left side of the chute.
5. Firmly press the restrictor into the chute to bottom out at the fold.
6. Replace setscrews on the left side of the restrictor, indenting the tip of the screw into the side of the plastic chute.
7. Replace the parts previously removed in step number 2.
8. Plug the dispenser in.

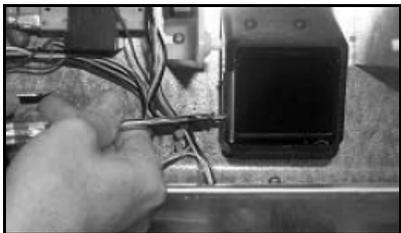
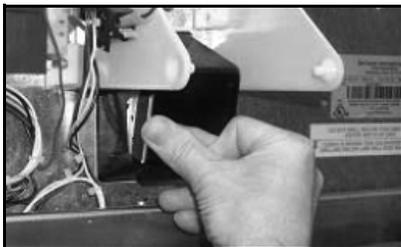


Figure 4

FURTHER ACTIONS

Contact Manitowoc Beverage Systems Service Sellersburg Indiana if you have any questions or concerns: 800-367-4233.